

Test report WinLogViewer 1.0.6.8

1. Introduction

Title: Test report WinLogViewer 1.0.6.8

Report date: 13.12.2024

Person responsible for tests: Marzena Hajduk

Test objective: verifying the correctness of the program's operation

2. Summary of test results

Number of tests performed: 30

Tests completed successfully: 18

Tests completed unsuccessfully: 12

Overall assessment: The system meets most of the assumptions, but requires correction of several errors.

3. Scope of tests

Functionalities covered by tests: navigating the program, uploading files, entering data

Functionalities not covered by tests: load tests, performance tests

4. Test environment

Software: Windows 10

Version of the tested system: 1.0.6.8

5. Details of test results

No .	Scenario	Observed result	Expected result	Priority	Attache mnts
1	1. Open WinLogViewer 1.0.6.8	Unable to enlarge the window - the button is grayed out	Can make the window bigger	LOW	
2	1. Open WinLogViewer 1.0.6.8 2. Click Export.../Import 3. Close Export.../Import window	The program hangs, the icon disappears from the taskbar and it cannot be closed	Nothing will happen, the program will work the same as before clicking Export.../Import	BLOCKER	Atch 2.
3	1. Open WinLogViewer 1.0.6.8 2. Click Refresh	After pressing Refresh an error appears	After pressing Refresh, the program will be refreshed without any errors	HIGH	Atch 3.

No	Scenario	Observed result	Expected result	Priority	Attachments
4	1. Open WinLogViewer 1.0.6.8 2. Choose something in Windows Event Logs and Logged	Once select any option, can't go back to not selecting an option, just like when open the program	It should be possible to uncheck the selected option	LOW	Atch 4.
5	1. Open WinLogViewer 1.0.6.8 2. Type in Event ID, Source, Computer(s) or Users:	After typing and clicking somewhere else, can't edit the entered thing. The whole thing is selected and can only type it again	You can edit typed items	HIGH	Atch 5.
6	1. Open WinLogViewer 1.0.6.8 2. Check something in Level 3. Uncheck previously checked	After single unclicking it changes to a square. After clicking again it disappears	It should be unchecked after one click	LOW	Atch 6.
7	1. Open WinLogViewer 1.0.6.8 2. Click File	The expanded list shows the Print option grayed out	The option should be available or invisible in the drop-down list	MEDIUM	Atch 7.
8	1. Open WinLogViewer 1.0.6.8 2. Click File 3. Click Help 4. Compare shortcuts	Import... and View Help have the same keyboard shortcut. Always shows Import...	The keyboard shortcut should be different	MEDIUM	Atch 8.
9	1. Open WinLogViewer 1.0.6.8 2. Click Help	about WinLogerViewer ... starts with a lover letter	Should start with capital letter	LOW	Atch 9.
10	1. Open WinLogViewer 1.0.6.8 2. Click File 3. Compare spelling Import... in File and Import at the bottom in the middle of the program	In File there is Import... At the bottom of the program there is Import	Spelling should be standardized	LOW	Atch 10.
11	1. Open WinLogViewer 1.0.6.8 2. In Event ID, Source, Computer(s) or Users press the right mouse button 3. Choose Open IME	Nothing will happen after pressing	When you press it, the IME will open	MEDIUM	
12	1. Open WinLogViewer 1.0.6.8 2. Click Help 3. Open View	The language is different from the program language	The language will be the same as the program language, i.e. English	LOW	

6. Analysis and conclusions

Areas of improvement: Functional, stylistic errors


Critical problems: System hangs during file import, cannot refresh program, cannot import files

7. Attachments


Atch 2. The program hangs, the icon disappears from the taskbar and it cannot be closed




Atch 4. Once select any option, can't go back to not selecting an option, just like when open the program

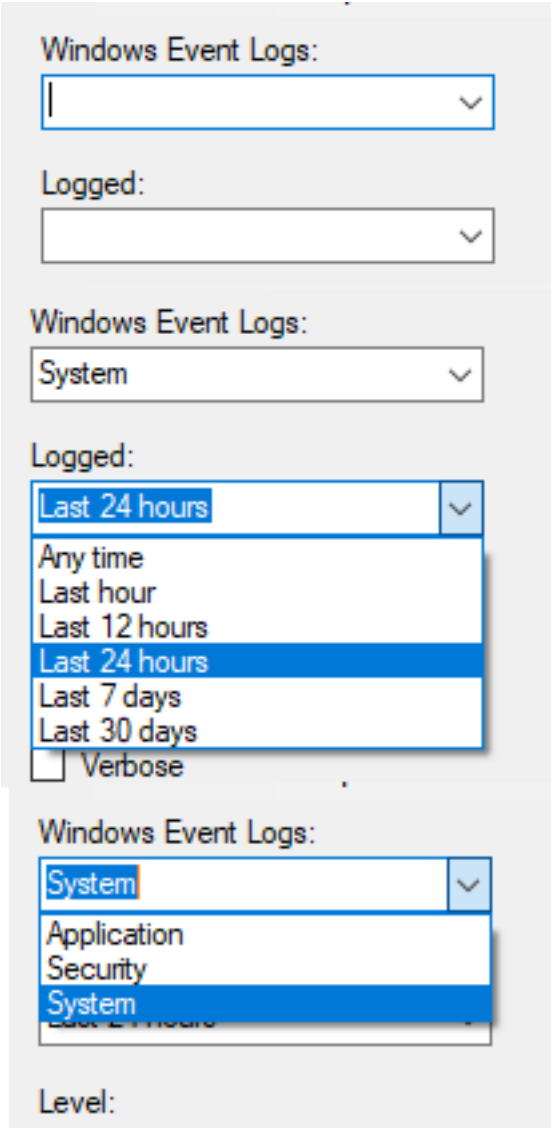


Atch 6. After single unclicking it changes to a square. After clicking again it disappears

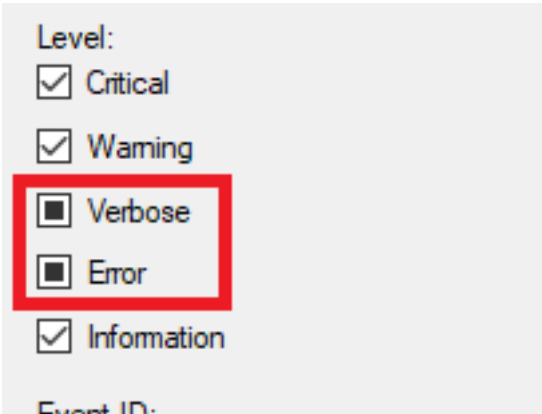


Atch 7. The expanded list shows the Print option grayed out

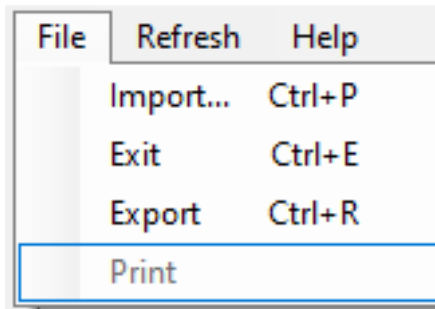

Atch 8.. Import... and View Help have the same keyboard shortcut. Always shows Import...

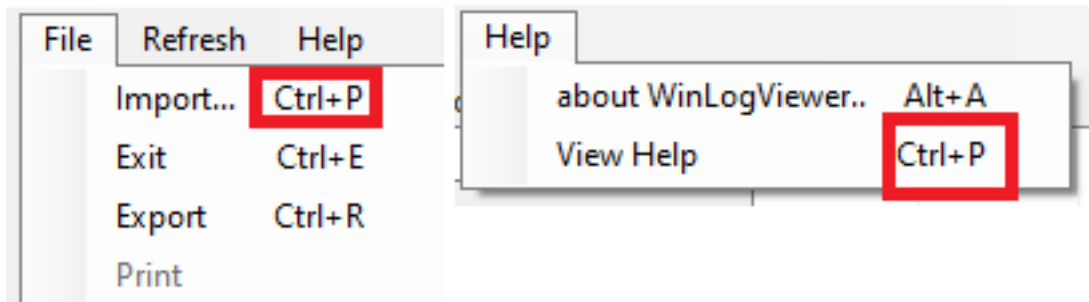

Atch 9. about WinLogerViewer... starts with a lover letter

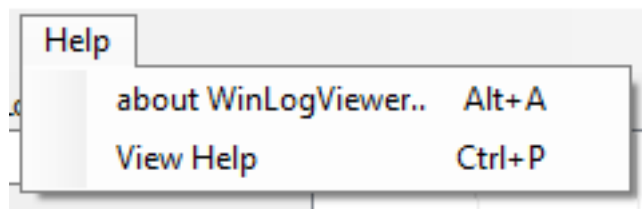

Atch 10. In File there is Import... At the bottom of the program there is Import

